Pleasant Hearth
Warming Your Home. Warming Your Heart.

HERITAGE MEDIA MANTEL FOR 23 IN. FIREBOX

MODEL #23-29-65

Français p. 11

Español p. 21

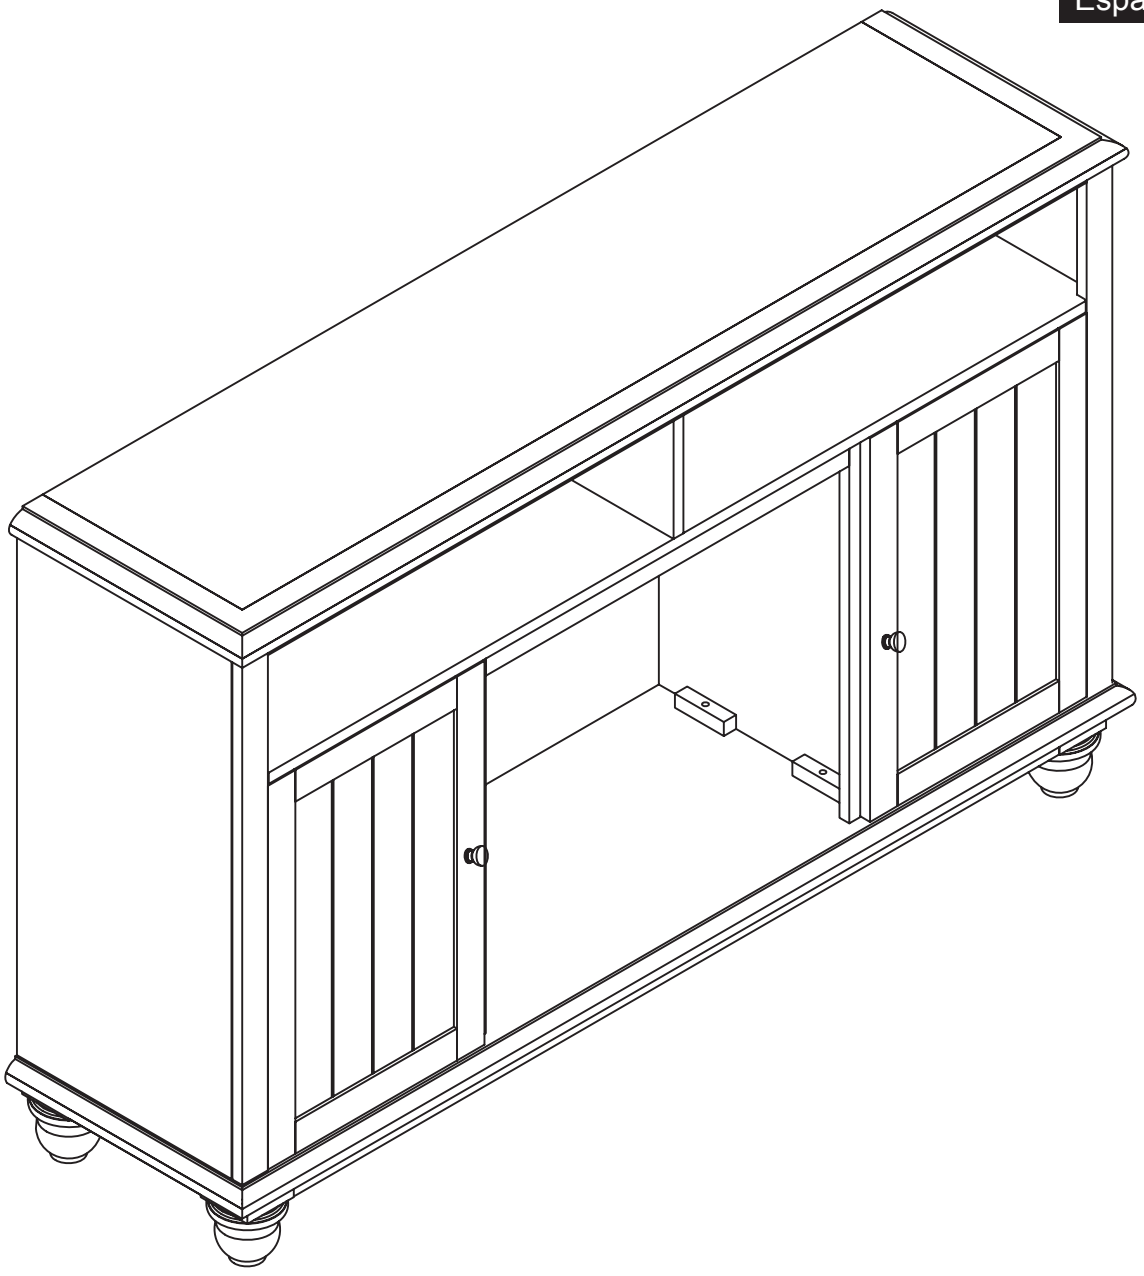

ATTACH YOUR RECEIPT HERE

Serial Number _____ **Purchase Date** _____

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-877-447-4768, 8:30 a.m. - 4:30 p.m., CST, Monday - Friday.

PACKAGE CONTENTS

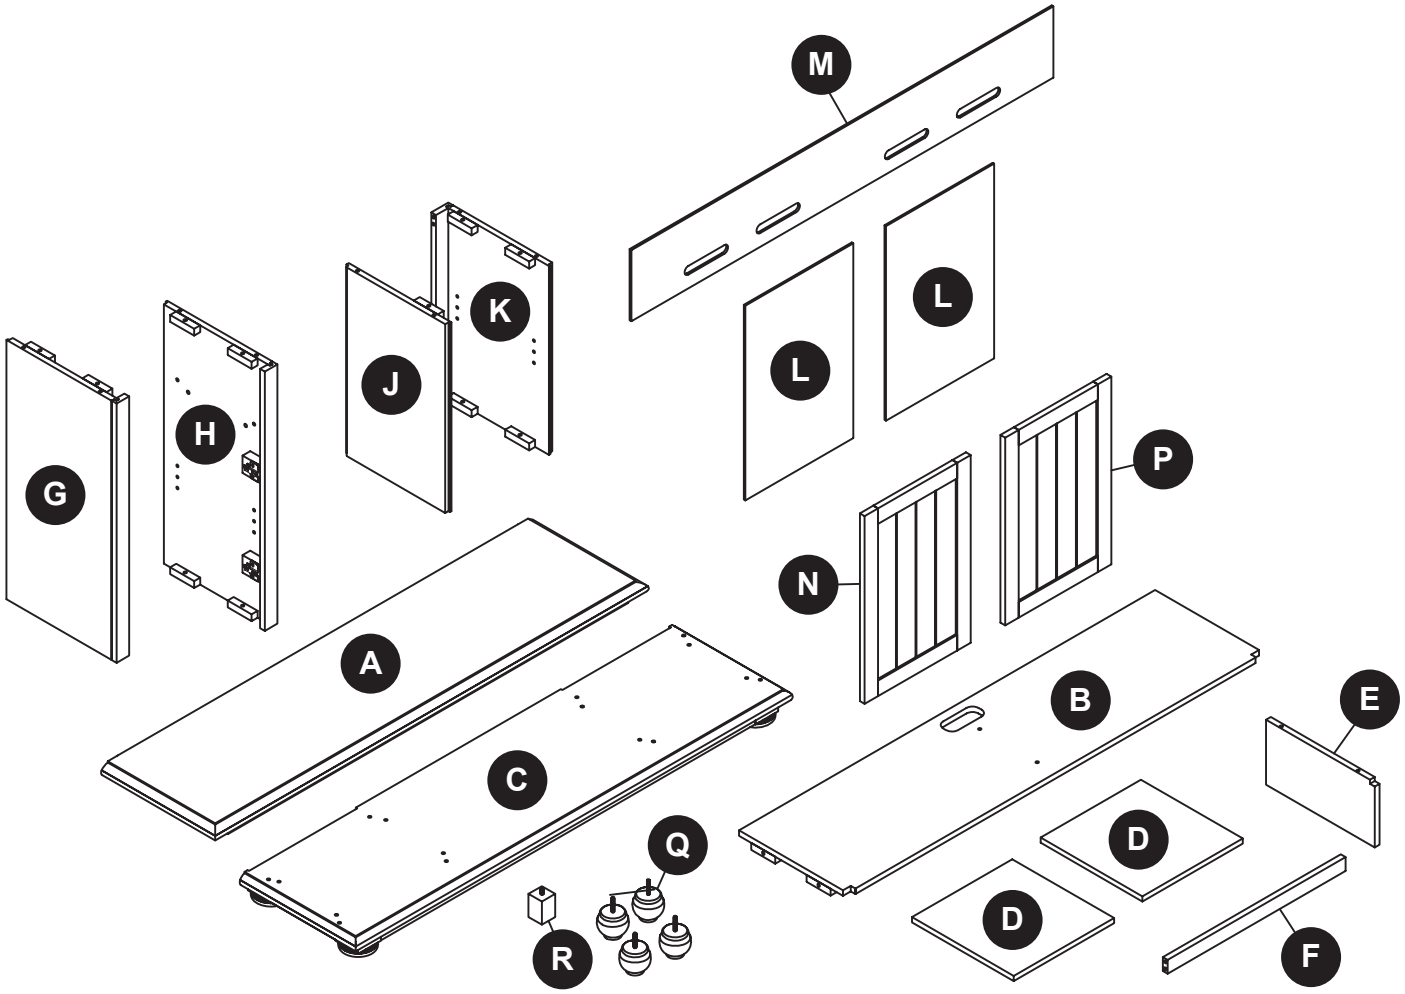

PART	DESCRIPTION	QUANTITY
A	Top Panel	1
B	Top Shelf	1
C	Base	1
D	Adjustable Shelf	2
E	Top Shelf Divider	1
F	Shelf Rail	1
G	Left Side Panel	1
H	Right Side Panel	1
J	Left Inner Panel	1
K	Right Inner Panel	1
L	Lower Back Panel	2
M	Upper Back Panel	1
N	Left Cabinet Door	1
P	Right Cabinet Door	1
Q	Leg	4
R	Middle Leg	1

HARDWARE CONTENTS (shown actual size)

AA	BB	CC	DD	EE	FF	GG	HH
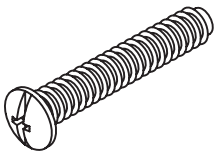							
Bolt	Flat Washer	Lock Washer	Dowel	Screw	Knob Screw	Cabinet Door Knob	Shelf Support
Qty. 20	Qty. 20	Qty. 20	Qty. 28	Qty. 42	Qty. 2	Qty. 2	Qty. 8

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING

- Mantel is heavy and should be assembled near its desired location.
- It is recommended that two people move the finished mantel to prevent injury.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 45 minutes

Tools Required for Assembly: Phillips screwdriver (not included).

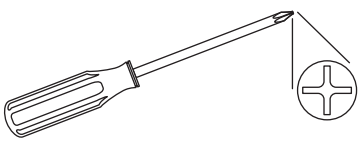

ASSEMBLY INSTRUCTIONS

1. Screw each of the four legs (Q) into the predrilled holes in each corner of the base (C). Screw middle leg (R) into predrilled hole in center brace of base (C).

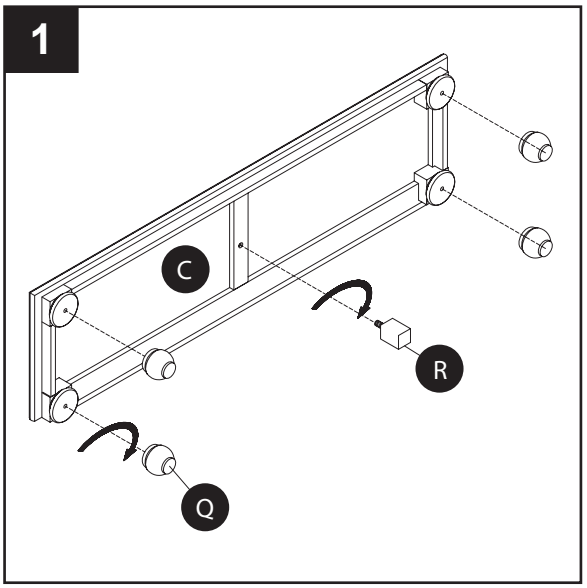

2. Insert two dowels (DD) into predrilled holes on each end of shelf rail (F). Slip one end of shelf rail (F) into predrilled holes in upper edge of left inner panel (J) and the other end into predrilled holes in upper edge of right inner panel (K). Press together until both joints are snug. Lay base (C) face up on a flat, level surface and insert four dowels (DD) into predrilled holes in center area of base (C). Slip panel assembly over dowels (DD) so that the dowels (DD) fit into predrilled holes in bottom edge of assembly. Insert two bolts (AA) through flat washers (BB), lock washers (CC), predrilled holes in edge blocks and into predrilled holes in base (C). Tighten with Phillips screwdriver (not included).
   Repeat on opposite side.

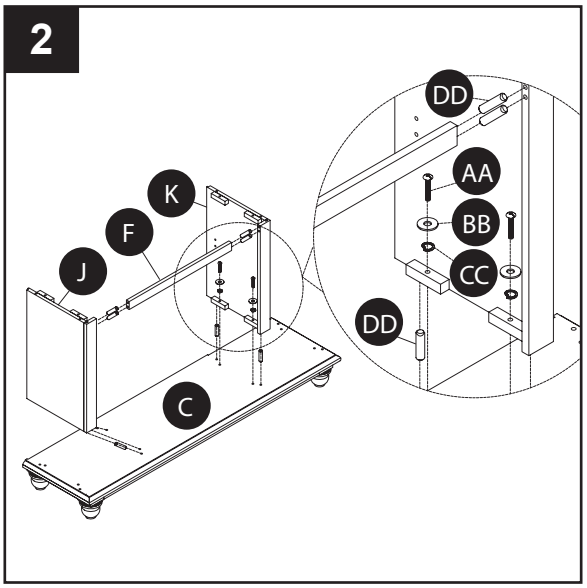

Hardware Used

AA	Bolt		x 4
BB	Flat Washer		x 4
CC	Lock Washer		x 4
DD	Dowel		x 8

ASSEMBLY INSTRUCTIONS

3. Insert two dowels (DD) into predrilled holes in each end of top shelf (B). Slip one end of top shelf (B) into predrilled holes on inside face of left side panel (G) and the other end into predrilled holes on inside face of right side panel (H). Press together until both joints are snug.

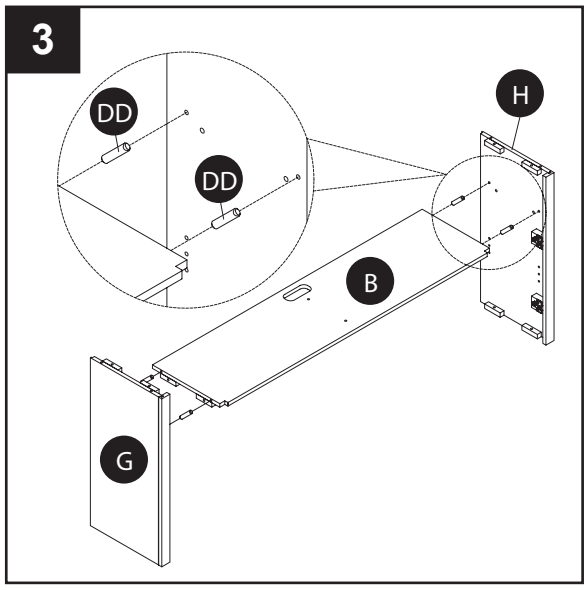

Hardware Used

DD	Dowel		x 4

4. Insert four dowels (DD) into predrilled holes in base (C). Insert four dowels (DD) into predrilled holes in top edge of left and right inner panels (J&K). Set top shelf assembly over dowels (DD) in base (C) and inner panel assembly so that the dowels (DD) fit into predrilled holes in bottom edges of left and right side panels (G&H) and underside of top shelf (B). Press down until all joints are snug.

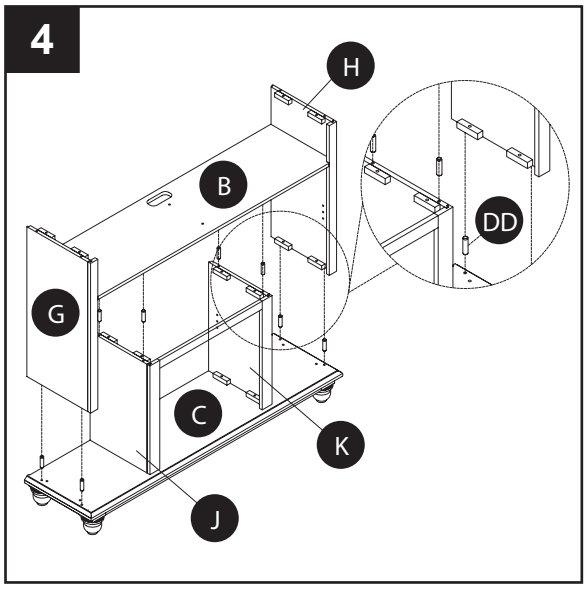

Hardware Used

DD	Dowel		x 8

ASSEMBLY INSTRUCTIONS

5. Insert two bolts (AA) through flat washers (BB), lock washers (CC), predrilled holes in edge blocks and into predrilled holes in base (C). Tighten with Phillips screwdriver (not included). Repeat on opposite side.

Hardware Used

AA	Bolt		x 4
BB	Flat Washer		x 4
CC	Lock Washer		x 4

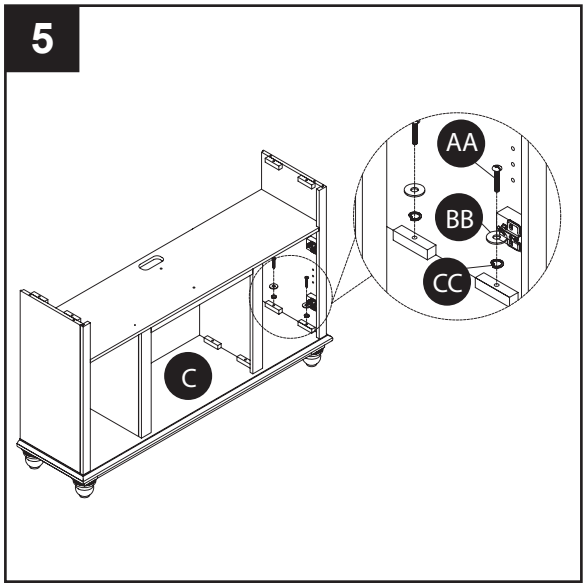

6. Lay assembly on its back. Insert four bolts (AA) through flat washers (BB), lock washers (CC), predrilled holes in edge blocks and into predrilled holes on right side of assembly as illustrated. Tighten with Phillips screwdriver (not included). Repeat on opposite end.

Hardware Used

AA	Bolt		x 8
BB	Flat Washer		x 8
CC	Lock Washer		x 8

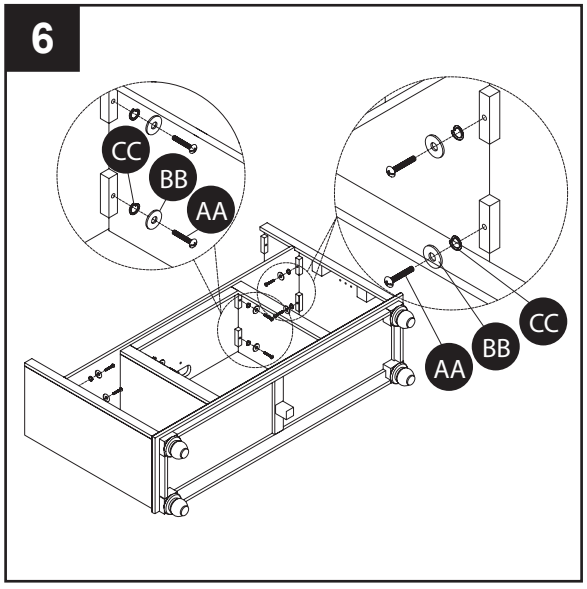

ASSEMBLY INSTRUCTIONS

7. With assembly sitting upright, insert two dowels (DD) into predrilled holes in top of top shelf (B). Slip top shelf divider (E) over dowels (DD) so that the dowels fit into predrilled holes in bottom edge. Press down until snug.

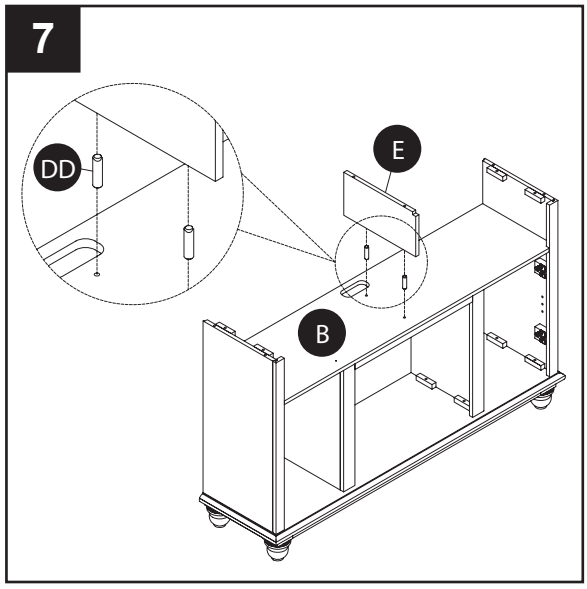

Hardware Used

DD	Dowel		x 2

8. With assembly sitting upright, insert six dowels (DD) into predrilled holes in top of edges of assembly. Slip top panel (A) over dowels (DD) so that the dowels fit into predrilled holes in underneath side of top panel (A). Insert two bolts (AA) through flat washers (BB), lock washers (CC), predrilled holes in edge blocks,and into predrilled holes in top panel (A). Tighten with Phillips screwdriver (not included).
   Repeat on opposite side.

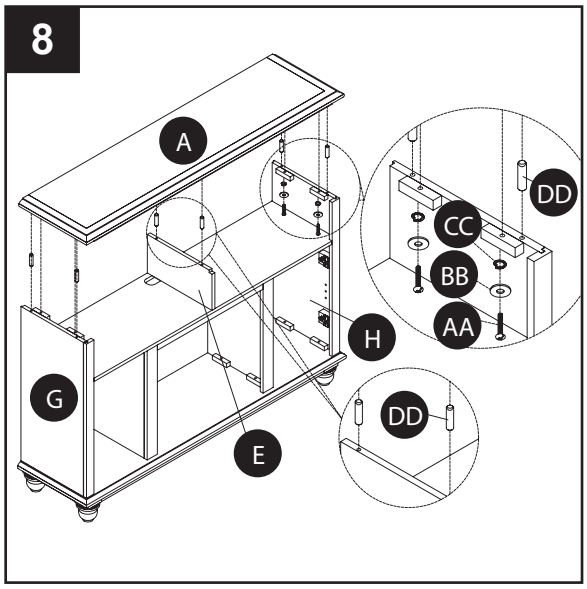

Hardware Used

AA	Bolt		x 4
BB	Flat Washer		x 4
CC	Lock Washer		x 4
DD	Dowel		x 6

ASSEMBLY INSTRUCTIONS

9. Attach upper back panel (M) and lower back panels (L) by inserting screws (EE) into predrilled holes and tightening with Phillips screwdriver (not included).

Hardware Used

EE	Screw		x 42

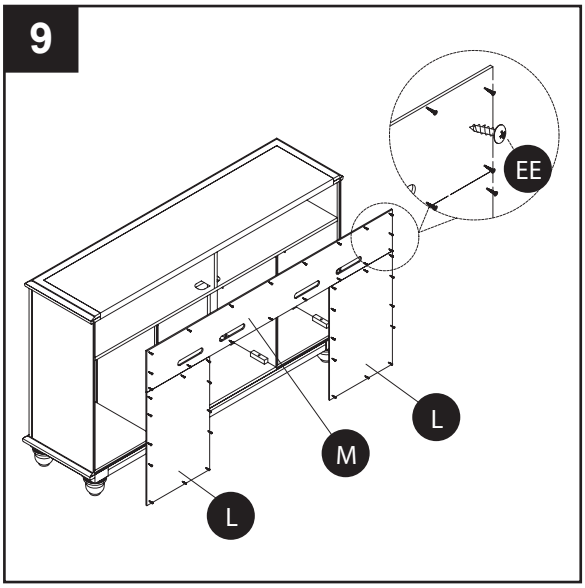

10. Insert shelf supports (HH) into predrilled holes as illustrated, keeping all shelf supports (HH) parallel to each other. Lay adjustable shelves (D) in place on each side of assembly.

Hardware Used

HH	Shelf Support		x 8

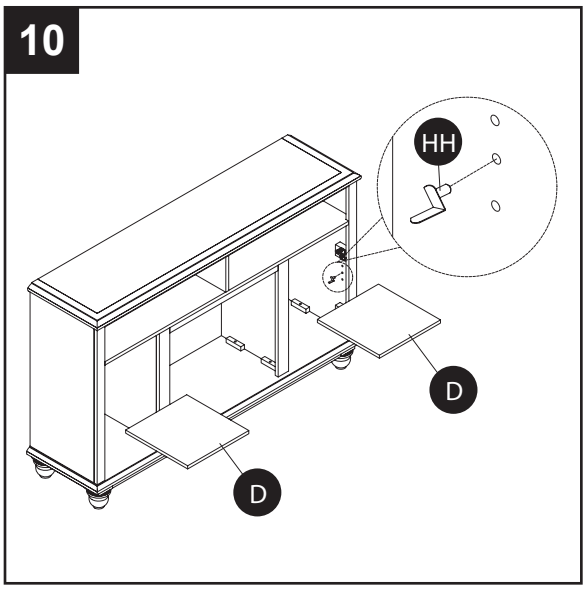

ASSEMBLY INSTRUCTIONS

11. Attach right cabinet door (P) to hinges on assembly. Attach cabinet door knob (GG) with knob screw (FF) inserted through predrilled hole in right cabinet door (P). Tighten with Phillips screwdriver (not included).
    Repeat with left cabinet door (N).

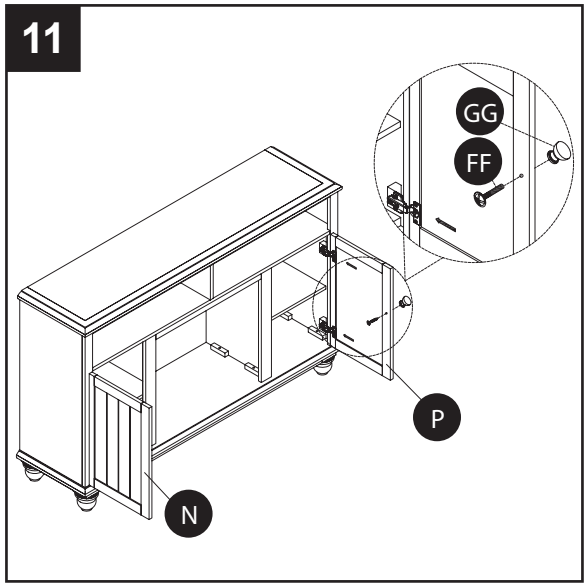

Hardware Used

GG	Cabinet Door Knob		x 2
FF	Knob Screw		x 2

CARE AND MAINTENANCE

- To maintain the finish, clean with a soft, slightly damp cloth and buff with a dry cloth.
- Wood furniture should never be dragged across a floor. The added stress from dragging the unit may cause the dragged edge to splinter or it may cause a joint to loosen.

ONE YEAR LIMITED WARRANTY

If within one year from the date of original purchase this item fails due to a defect in material or workmanship, we will replace or repair at our option, free of charge. To order parts or to obtain warranty service, call 1-877-447-4768, Monday – Friday, 8:30 a.m. – 4:30 p.m., CST. This warranty does not cover defects resulting from improper or abnormal use, misuse, accident, or alteration. Failure to follow all instructions in the owner's manual will also void this warranty. The manufacturer will not be liable for incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion of incidental or consequential damages may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Variations in actual wood color and finishes which may result from natural characteristics of the wood, such as grain patterns, mineral streaks and the like, are not considered defects. As wood continues to move and age you may notice these slight differences in color, even on different parts of any individual unit. Sound knots and slight surface cracks are true personality of a quality piece of wood furniture.

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at at 1-877-447-4768, 8:30 a.m. - 4:30 p.m., CST, Monday - Friday.

PART	DESCRIPTION	PART #
A	Top Panel	20-12-178
B	Top Shelf	20-12-179
C	Base	20-12-180
D	Adjustable Shelf	20-12-181
E	Top Shelf Divider	20-12-182
F	Shelf Rail	20-12-183
G	Left Side Panel	20-12-184
H	Right Side Panel	20-12-185
J	Left Inner Panel	20-12-186
K	Right Inner Panel	20-12-187
L	Lower Back Panel	20-12-188
M	Upper Back Panel	20-12-189
N	Left Cabinet Door	20-12-190
P	Right Cabinet Door	20-12-191
Q	Leg	20-12-192
R	Middle Leg	20-12-193
AA	Bolt	20-12-194
BB	Flat Washer	20-12-195
CC	Lock Washer	20-12-196
DD	Dowel	20-12-197
EE	Screw	20-12-198
FF	Knob Screw	20-12-199
GG	Cabinet Door Knob	20-12-200
HH	Shelf Support	20-12-201

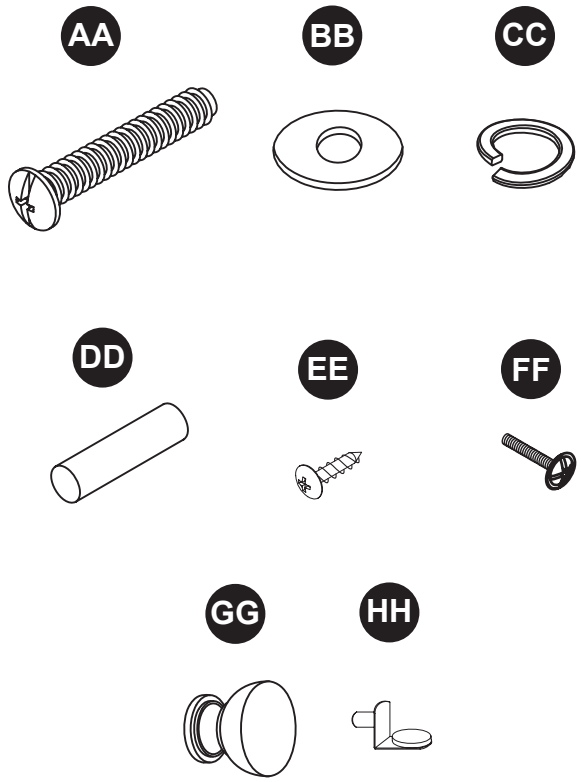

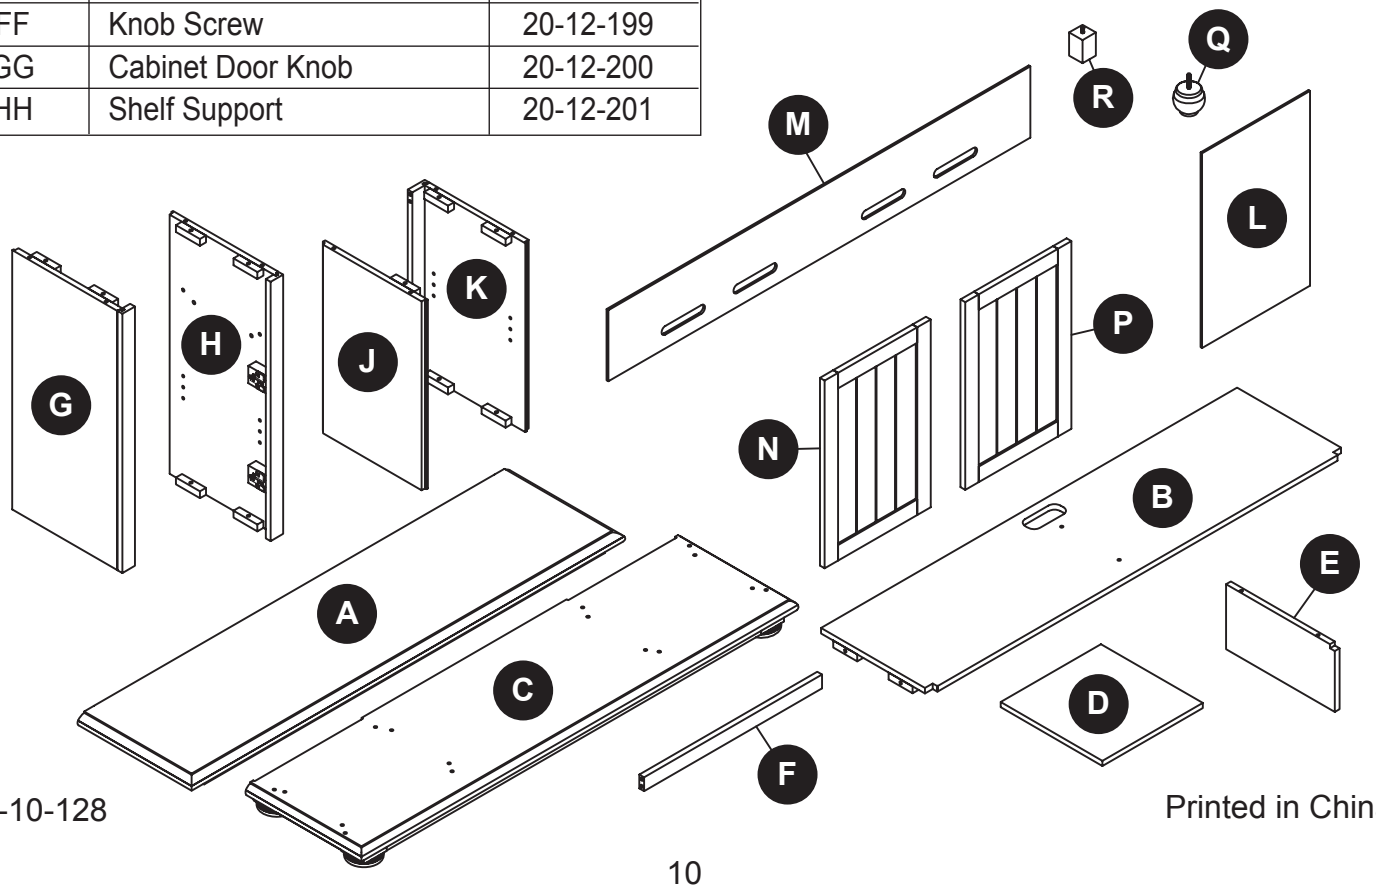

20-10-128

Printed in China